



## **Drain Donut:**

### **Inspection and Maintenance**

- ☐ Inspect Drain Donut BMP prior to forecast rain, daily during extended rain events, after rain events, weekly during the rainy season, and at two-week intervals during the non-rainy season.
- ☐ Inspect Drain Donut for damage and repair as needed.
- ☐ Inspect the Drain Donut for areas of standing water during every visit.
- ☐ Sediment that accumulates in the BMP must be periodically removed in order to maintain BMP effectiveness. Sediment should be removed when the sediment accumulation reaches one-third of the doughnut height capacity. Sediment removed during maintenance may be incorporated into earthwork on the site or disposed of at an appropriate location.
- ☐ Remove sediment accumulated on the Drain Donut by sweeping method by broom using same procedures as dirt removal for road tracking.
- ☐ Remove storm drain inlet protection once the drainage area is stabilized.

